

THUNDERX3

GAMING REVOLUTION

TK50



THUNDERX3 User Manual


KEYBOARD FEATURES



DETACHABLE WRIST REST



KEY SWITCH

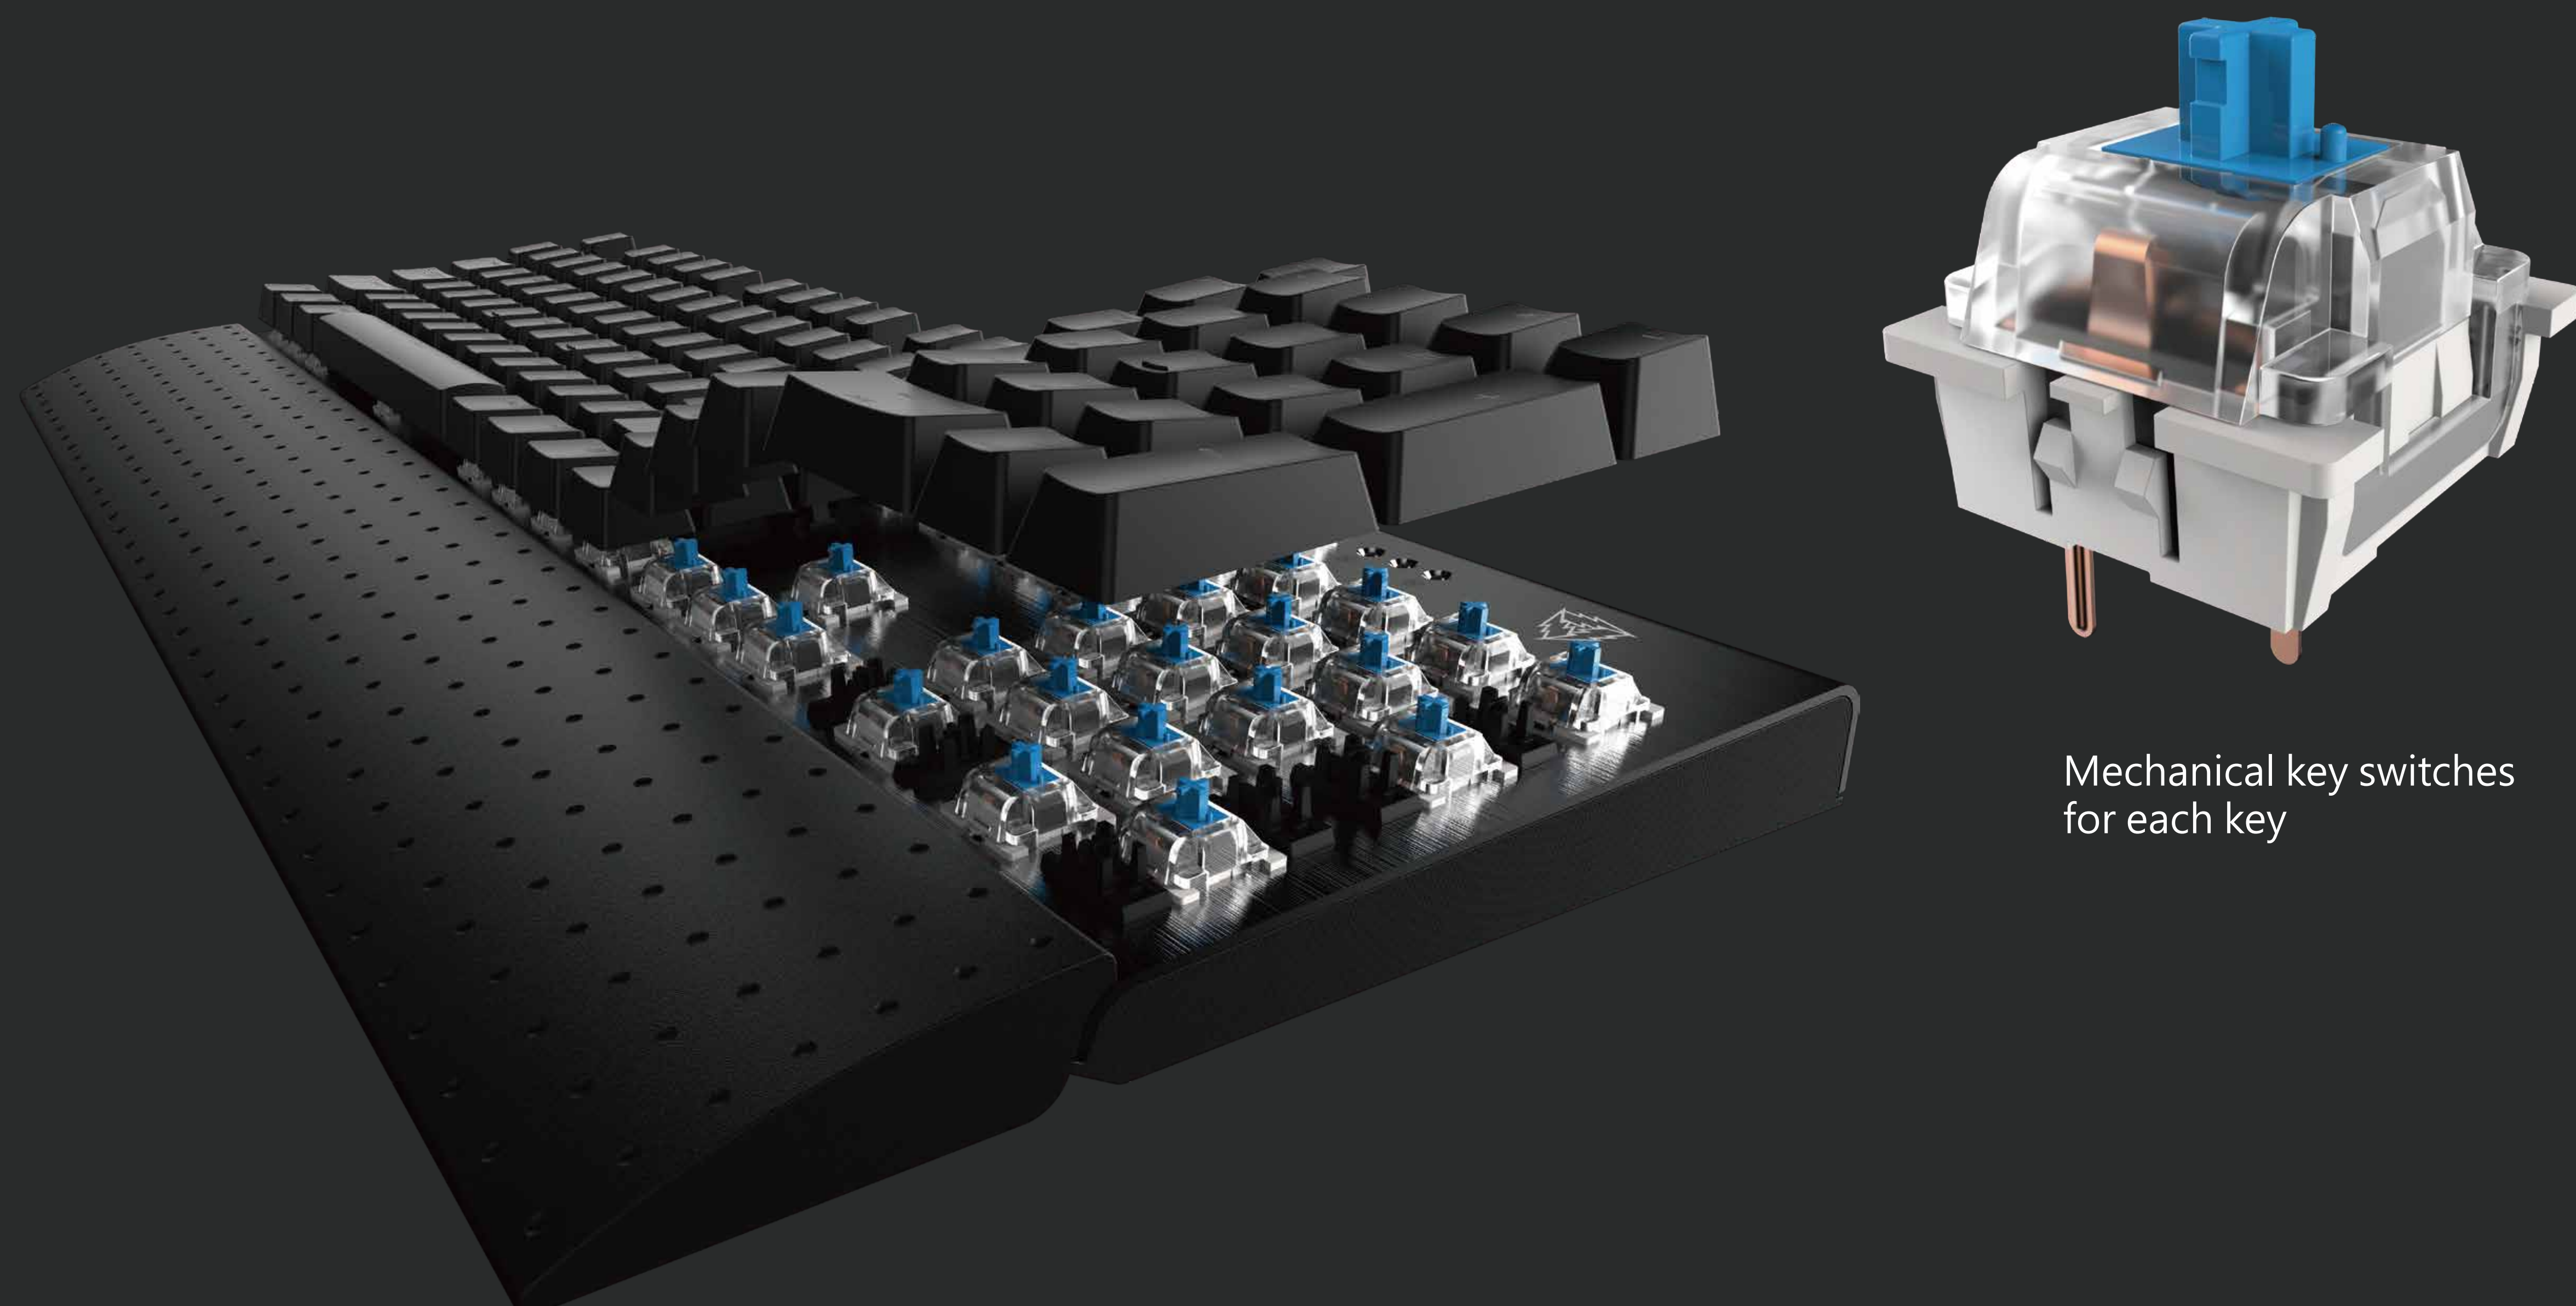

LED BACKLIGHT



Press Fn+F12 to select from 1 of the 12 flashing modes listed below:

- Mode 1: All LED on
- Mode 2: LED Breathing effect
- Mode 3: Row 1,3,5 interlaced flashing with row 2,4,6
- Mode 4: Row 1,3,5 interlaced pulsating with row 2,4,6
- Mode 5: LED on from top row to bottom row
- Mode 6: LED on from bottom row to top row
- Mode 7: Backlight drop from top to bottom row and pile up
- Mode 8: Backlight rise from bottom to top row and pile top-down
- Mode 9: Backlight move from outer rows to center rows
- Mode 10: Backlight move from center rows to outer rows
- Mode 11: LED on from center rows to outer rows
- Mode 12: All LED off

